


Level adjusters type LV511 with connecting fitting CT88

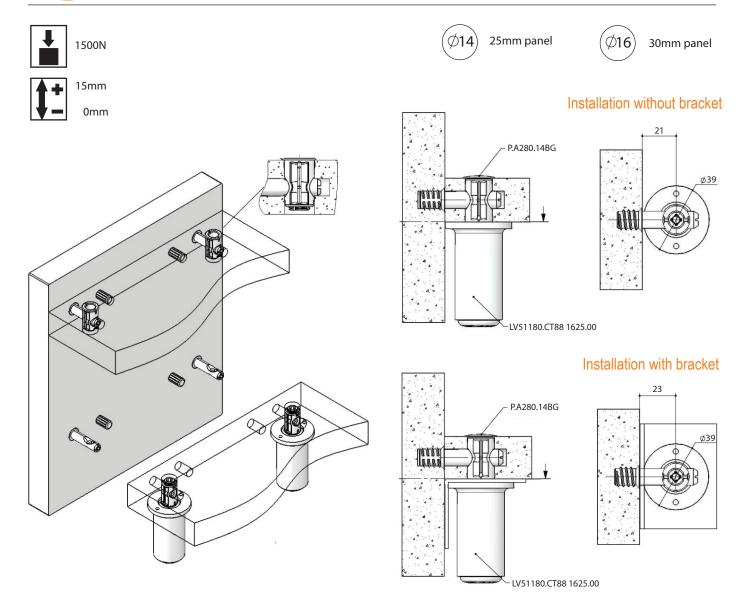

Level adjuster characterised by being assembled to the connecting fitting. It supports the outer side. It is particulary useful in cases where the internal sides do not go on the ground as machininhg is not required.



